


The file **ProCal Language Template.mdb** (located on the **CD** in the **ProCa\Languages** Folder) can be copied to create a new language. To create a new language file :

1. Copy the file **ProCal Language Template.mdb** and rename it to the desired language name (e.g. Français.mdb)
2. Open the new language file using **Microsoft Access** - you will see several tables

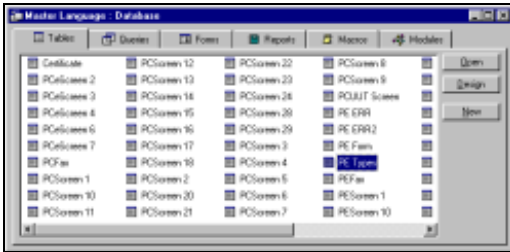

3. Open each table - you will see a line for **English** - DO NOT DELETE THIS LINE!!

PCScreen 5 : Table						
	Language Type	Test	4-Wire Mode	Procedure	Number	T
▶	English	Test	4-Wire Mode	Procedure	No.	Tes
*						

Copy the **English** line and create a new line

PCScreen 5 : Table						
	Language Type	Test	4-Wire Mode	Procedure	Number	T
▶	English	Test	4-Wire Mode	Procedure	No.	Tes
*	New Language	Translated Word	Translated Word	Translated Word	Translated Word	

Change the **Language Type** field to the new language name

NOTE : THIS LANGUAGE TYPE MUST BE SET TO EXACTLY THE SAME AS THE FILENAME
 E.g. IF the filename is **Français.mdb**, the Language Type field must be set to **Français**

Change the fields in the new language line to the converted language

4. Repeat for all tables (these tables cover **ProSet**, **ProEdit**, **ProCert** and **ProCal**)
5. Once all tables are edited, place the new language file in the **C:\ProCa\Languages** FOLDER
6. Start ProSet and go to system settings.
select the new language from the drop down list.
7. Exit ProSet.

THE NEW LANGUAGE SETUP IS NOW COMPLETE

IMPORTANT NOTE : THE LANGUAGE DATABASE FORMAT MUST BE ACCESS 2000. NEWER VERSIONS OF ACCESS MAY BE USED TO EDIT THE LANGUAGE DATABASE BUT WHEN OPENING, IF ACCESS ASKS IF IT SHOULD CONVERT THE DATABASE CHOOSE NO (OR OPEN DATABASE ONLY).