

TRANSMILLE FREE CALIBRATION PROCEDURES


The FREE calibration procedures available on the Transmille web site are provided as a general guide to procedure writing, and to help new ProCal users get up and running.

These FREE procedures are password protected, and you will need to contact Transmille in order to receive this password via Email.

Once you have applied for the password, and have obtained a copy of the Transmille software CD, please follow the steps below to IMPORT these FREE procedures into your system.

STEP 1

Download one or more of the required procedures by clicking the [Download](#) hyperlink, then choosing Save To Disk.

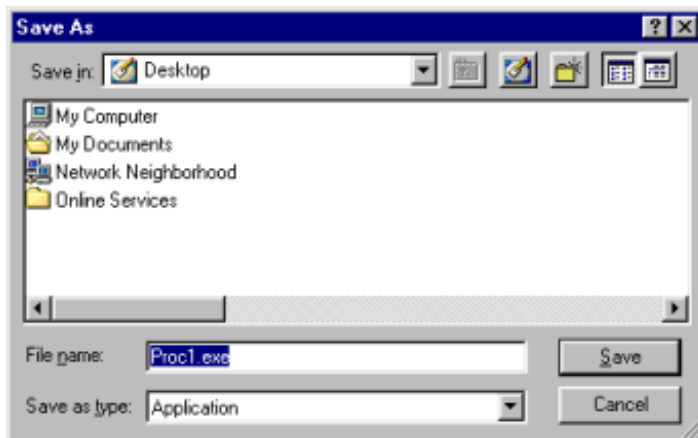

Save the file (e.g. Proc1.exe) to a folder (directory) on your computer.

REPEAT THIS FOR EACH PROCEDURE YOU REQUIRE FROM THE WEBSITE


STEP 2

In the folder which you have downloaded the selected procedures to, run each of the files (e.g. Proc1.exe) by double clicking on it from, for example, Windows Explorer.

An instruction message will be displayed - click OK when you have read this message.



The WinZip self extractor screen will be displayed - check the 'Unzip to folder' path is OK, then click UNZIP.

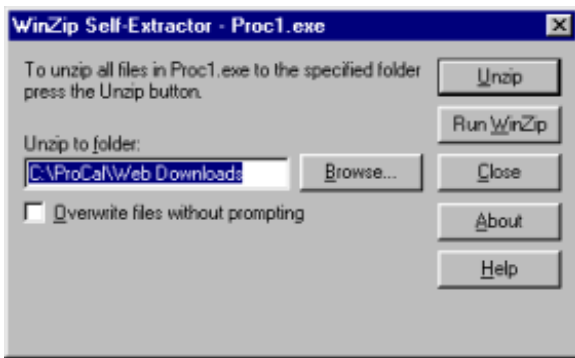

A password screen will be shown.

Type in the password you obtained from Transmille (Note : the password is case sensitive) :



On completion of the unzip process the following message will be displayed :




Click OK to proceed, then click close.

REPEAT THIS PROCESS FOR ALL THE PROCEDURE FILES YOU DOWNLOADED.

STEP 3

The procedure files should now reside in a C:\ProCal\Web Downloads folder. To IMPORT these procedure into your ProCal system, ProEdit must be used.

Start up ProEdit and select the UTILITIES MENU, then select IMPORT PROCEDURES.

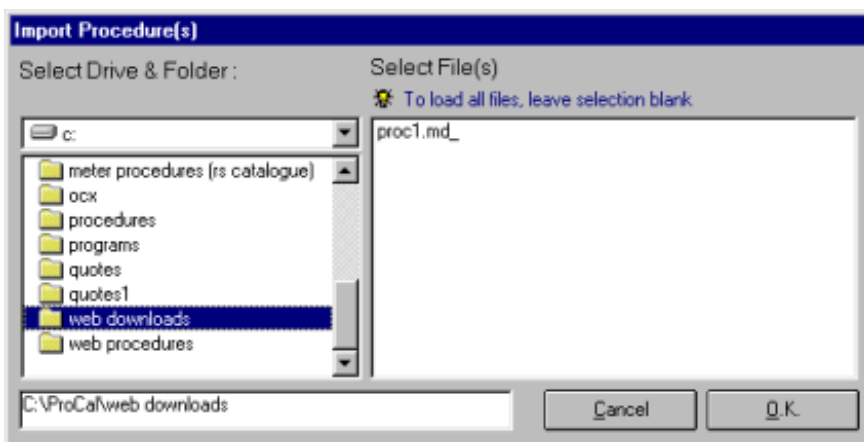

Select the C:\ProCal\Web downloads folder and the files to IMPORT, then click OK.

ProEdit will now IMPORT all of the selected procedures.